Setting up the AutoMARK

REMEMBER:
ALWAYS HAVE TWO PEOPLE TO LIFT THE AUTOMARK.

Set up the card table to be used for the AutoMARK. Set the case near the card table.

To open case:

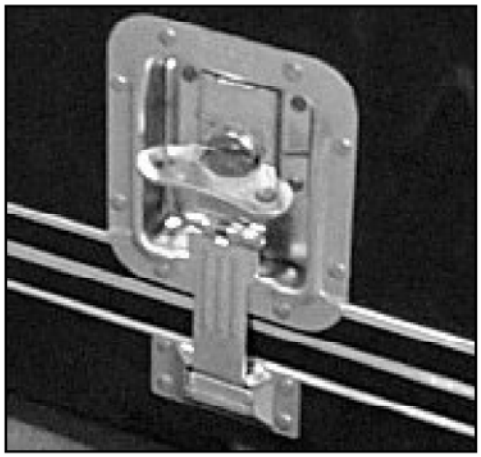

✓ lift up

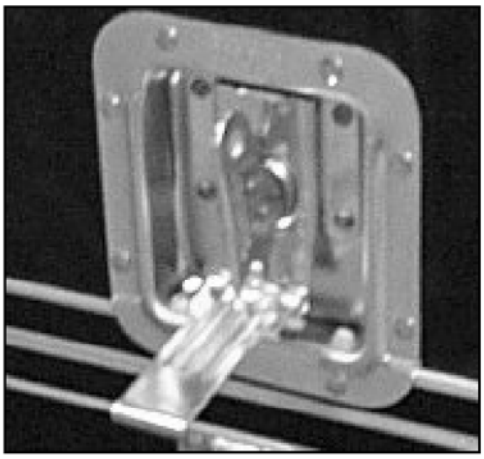

✓ turn counter-clockwise.

With one precinct officer on each side of the machine place your fingers in the grooves, one towards the front and one towards the back of the machine. Lift the machine and place it on the card table.

To open the AutoMARK move the left and right sliding latches outward to unlatch the lid.

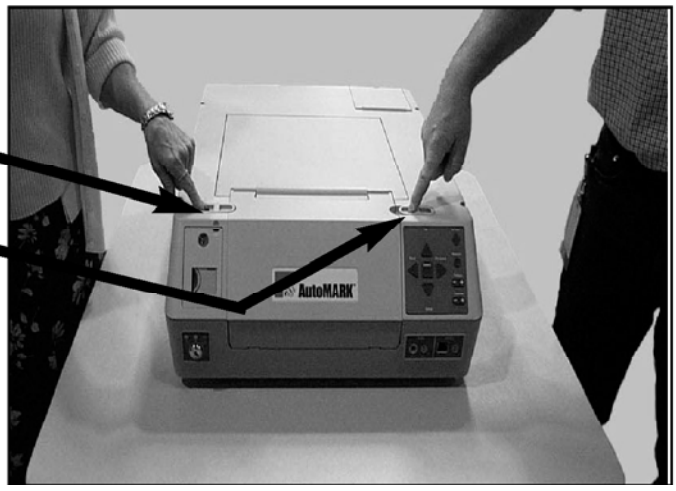

Fold back the front lid

Lift Panel

Pull the screen in an upright postilion and pull up panel

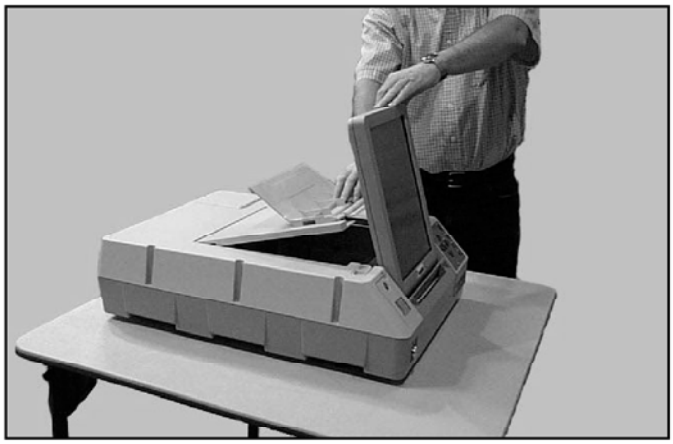

Place (push) the panel down and let screen rest against the panel

Lift the ballot feed tray up

Then drop ballot feed tray down.

Using the power cord in the case, connect it to the back of the AutoMARK and plug it into the wall.

If needed, use an extension cord included in your supplies.

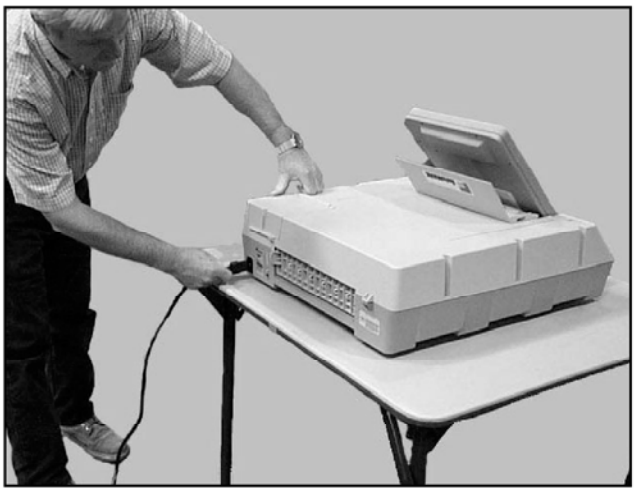

There are two standard head phone jacks in the front panel. The head phones that are supplied with the unit plug into the second plug from the left. If a voter brings a head phone it may fit into the adapter.